

ARENDAL UNPACKING GUIDE

Carefully cut the packing tape along the seam of all top flaps.

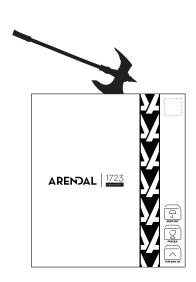

Fold back the carton flaps, and set aside of all the stuff on top.

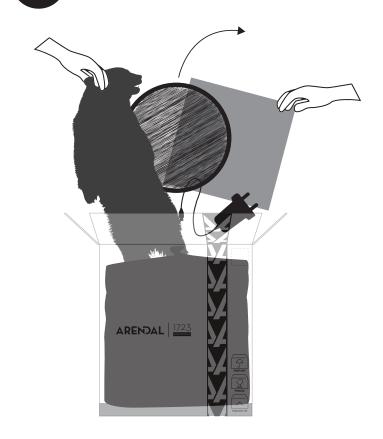

Untie the bag and push it down like a sock, clear of the subwoofer base.



Replace the packaging on the subwoofer base.

